


Door Viewer Installation Instructions

ITEM NO.	VIEW	"D" BORE ON DOOR	DOOR RANGE
DV90	160°	1/2"	1-3/8" to 2"
DV91	180°	1/2"	1-3/8" to 2"
DV180	180°	9/16"	1-3/8" to 2"
ULDV160	160°	1/2"	1-3/8" to 2"
ULDV200	200°	9/16"	1-3/8" to 2"
10ULDV201	200°	9/16"	1" to 1-3/8"

INSTALLATION INSTRUCTIONS:

- 1- Locate the best position to install the door viewer. Ideally at eye level (approximately 5 feet)
- 2- Use a 1/8" drill bit to make a pilot hole completely through the door. Keep the drill horizontal
- 3- Use the proper bit size, as determined by the size of the Inner lens Cylinder, or BORE, to drill the hole halfway, then move to the other side of the door and drill through the other half. Keep the drill horizontal.
- 4- Disassemble the door viewer by rotating the inner lens cylinder counter clockwise while holding the Outer lens section.
- 5- Insert the Outer lens section from outside of the door, then screw the inner lens cylinder from the inside of the door clockwise while holding the Outer lens section until the viewer is tight.

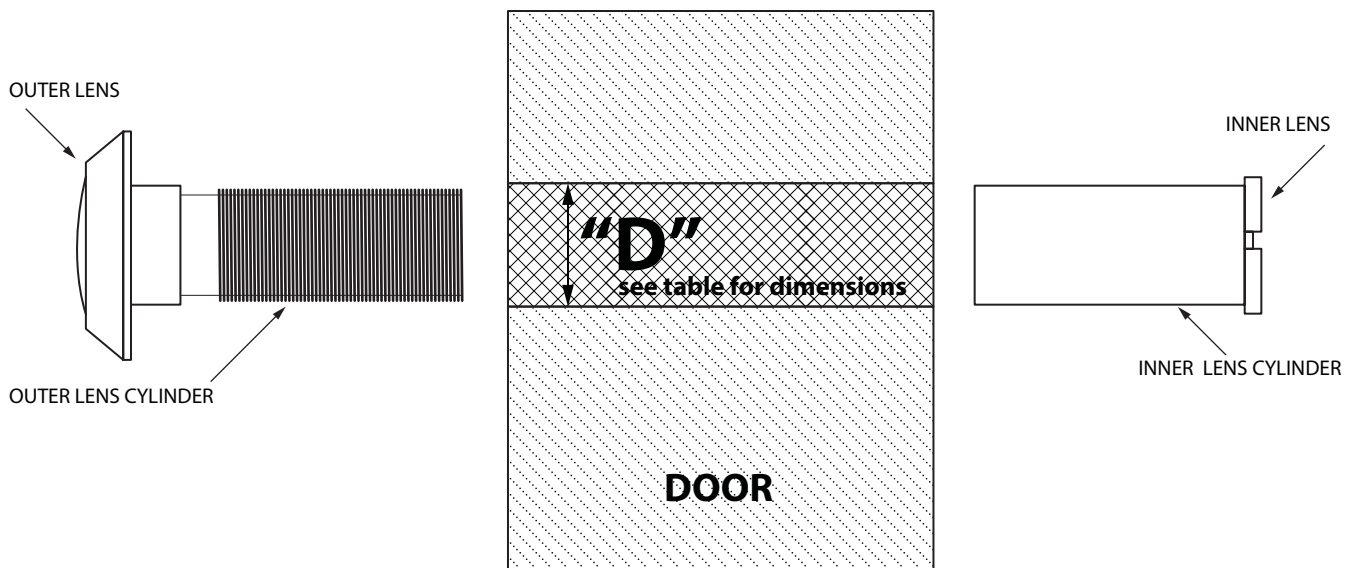

Cal-Royal Products, Inc.

6605 Flotilla St., City of Commerce, CA 90040 U.S.A.

Phone: (323) 888-6601 • (800) 876-9258 • Fax: (323) 888-6699 • (800) 222-3316

Email: sales@cal-royal.com • Website: www.cal-royal.com

The illustration and technical description in this Specification Sheet is current as of the date in the version box above. Cal-Royal Product reserves the right to, and may frequently make changes and/or improvements in designs and dimensions.

