

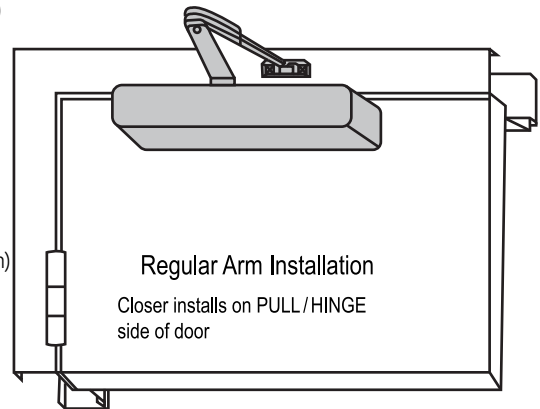


900 SERIES : REGULAR ARM INSTALLATION (PULL SIDE)


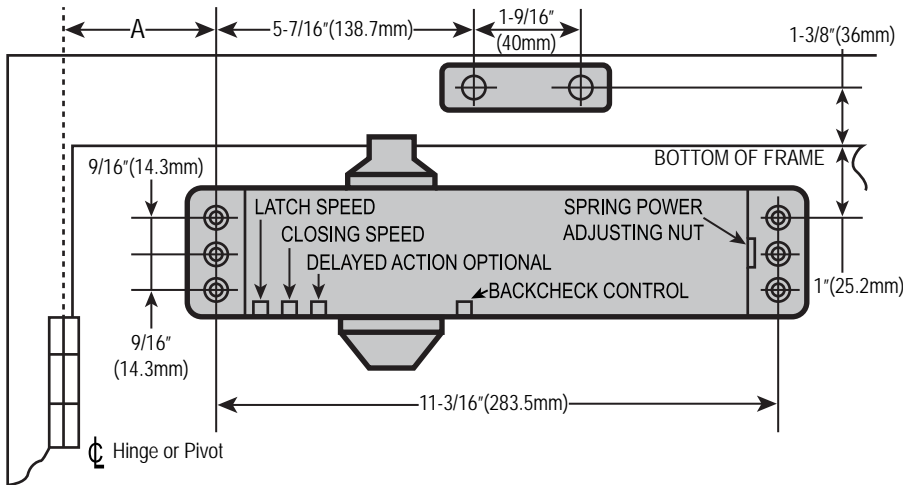


- RIGHT HAND DOOR SHOWN
- LEFT HAND DOOR OPPOSITE
- DIMENSIONS ARE IN INCHES
- DRAWING NOT TO SCALE

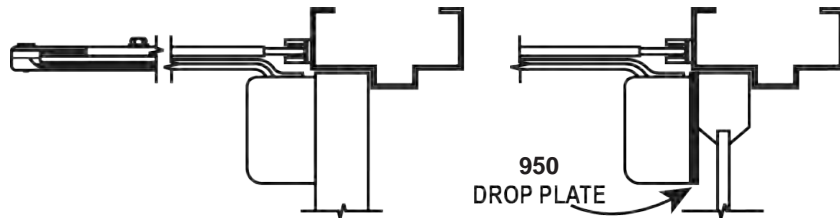


OPENING	DIM A
TO 120°	7-3/32 (180mm)
120° - 180°	3-15/16 (100mm)

900 SERIES: TOP JAMB INSTALLATION (PUSH SIDE)


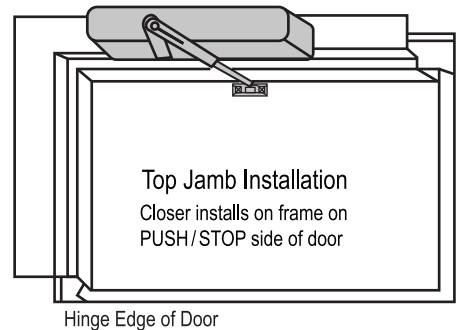
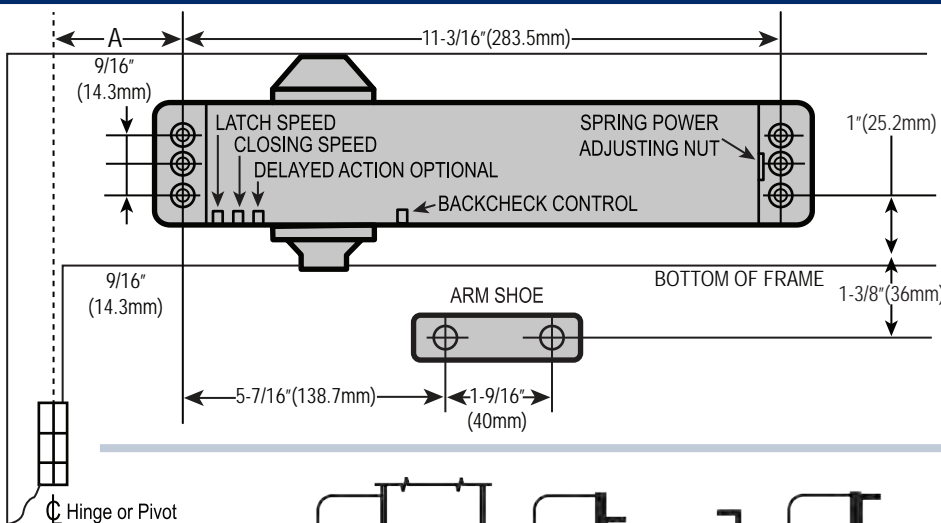


- LEFT HAND DOOR SHOWN
- RIGHT HAND DOOR OPPOSITE
- DIMENSIONS ARE IN INCHES
- DRAWING NOT TO SCALE

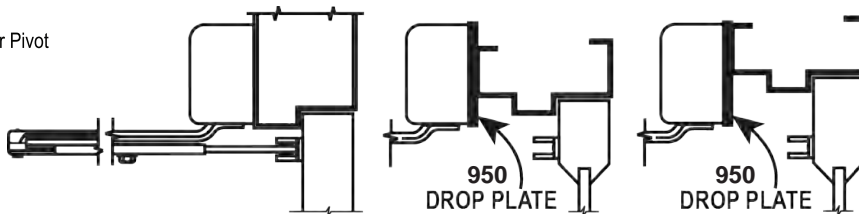


OPENING	DIM A
TO 120°	7-3/32 (180mm)
120° - 180°	3-15/16 (100mm)

900 SERIES : PARALLEL ARM INSTALLATION (PUSH SIDE)

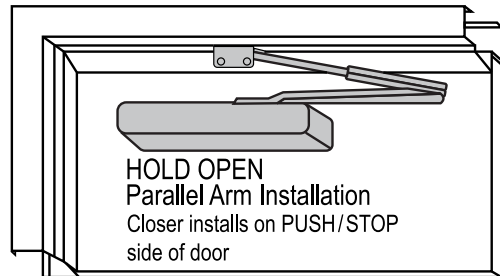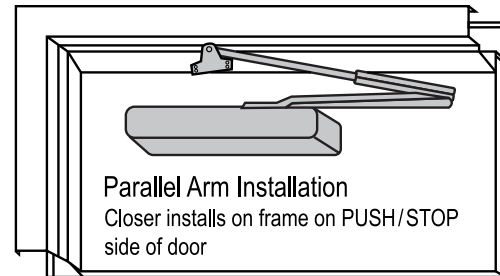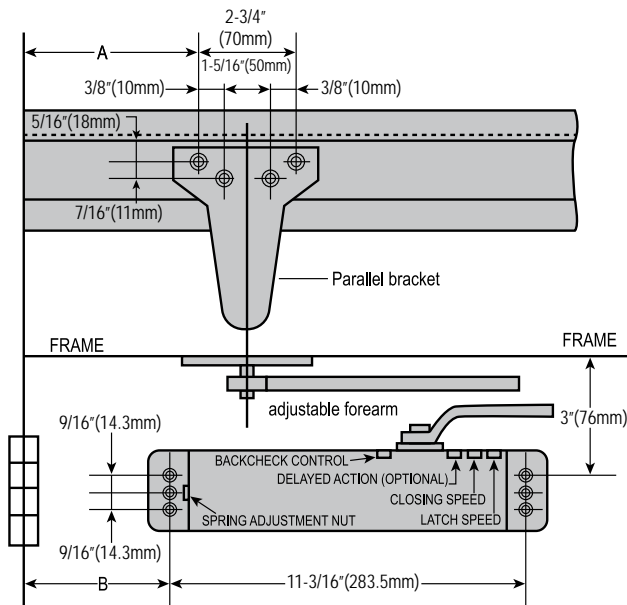


OPENING	DIM A	DIM B
TO 120°	9-1/2(241.5 mm)	6-1/8 (156 mm)
120° - 180°	5-7/8 (149.7 mm)	2-9/16 (65 mm)

- LEFT HAND DOOR SHOWN
- RIGHT HAND DOOR OPPOSITE
- DIMENSIONS ARE IN INCHES
- DRAWING NOT TO SCALE

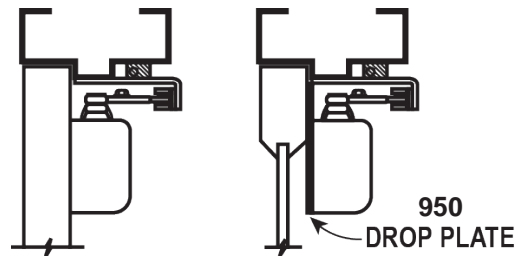


900 SERIES : OPTIONAL INSTALLATION

REGULAR ARM (PULL SIDE)

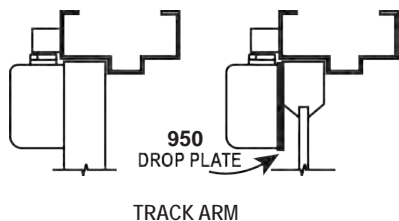

TOP JAMB (PUSH SIDE)

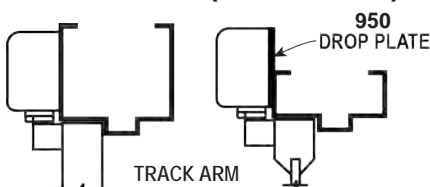

MAXIMUM OPENING: 180°(Standard), 120° (Hold Open)

OPTIONAL INSTALLATION

ARMS



- 901 / 902 - Hold-Open Arm with Parallel Bracket, Non-Handed with Stop in Soffit Shoe
- 900EXT - Extended Long Arm (3" Extension) for Top Jamb with Deep Reveals
- 945AR - Door Closer Arm (Main and Regular Forearm)
- TRACK / 900 - Slide Track Arm with Removable Hold-Open

BRACKETS

- 950 - Flat Drop Plate for Top Rail less than 3 1/2"

900 SERIES : OPTIONAL INSTALLATION

PARALLEL ARM (PUSH SIDE)

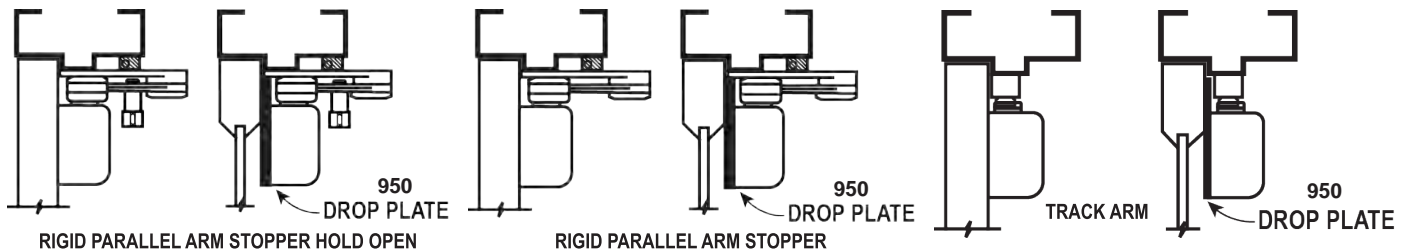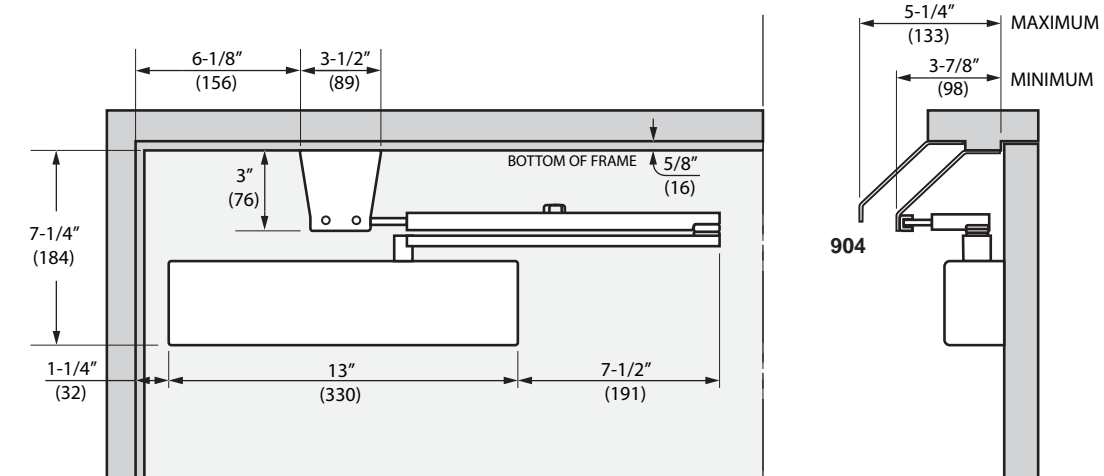

MAXIMUM OPENING: 180° (Standard), 120° (Hold Open)

OPTIONAL INSTALLATION

ARMS

- 900HOSPRING - Super Rigid Parallel Arm Stopper Hold-Open, Non-Handed with Spring Loaded Stop in Soffit Shoe
- 900SPRING - Super Rigid Non-Handed Parallel Arm with Spring Loaded Stop in the Soffit Shoe
- HOSRPS900 - Super Rigid Parallel Arm Stopper Hold-Open, Non-Handed with Stop in Soffit Shoe
- SPAS900 - Super Rigid Parallel Arm Stopper, Non-Handed with Stop in Soffit Shoe
- 901 / 902 - Hold-Open Arm with Parallel Bracket, Non-Handed with Stop in Soffit Shoe
- 900EXT - Extended Long Arm (3" extension) for Top Jamb with Deep Reveals
- 945AR - Door Closer Arm (Main and Regular Forearm)
- TRACK / 900 - Slide Track Arm with Removable Hold-Open

BRACKETS

- 904 - Parallel Arm Drop Bracket for Non-Hold Open Parallel Arm Applications to Clear a Surface-Applied Stop / Holder
- 905 - Parallel Arm Bracket
- 950 - Flat Drop Plate for Top Rail less than 3 1/2"